


# RJ11 Connector for RS232 Communication

## RJ11 Connector

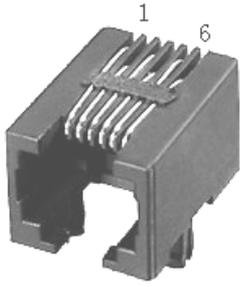

Applied To:

Stepper Drive:

DM432C, DM442, DM556, DM856, 3DM683, AM882, DM1182, DM2282

Servo Drive:

DCS810, DCS810S, ACS306, ACS606, ACS806

Pin	Signal	Description	I/O
1	NC	-	-
2	+5V	+5V power only for STU, <b>left it unconnected when connect to a PC serial port</b>	O
3	TxD	RS232 transmit.	O
4	GND	Ground.	GND
5	RxD	RS232 receive.	I
6	NC	-	-

## 2. Cable connections to a PC serial port (Male DB9)

