

4. Basic operation wiring diagram

(1) Single-phase input three-phase output (for AT1)

(Three phase 220V, if 380V Star-connection method needs to change to the 220V Delta-connection method)

