



I/O Information for a Fanuc Spindle Drive

Spindle Drive Inputs

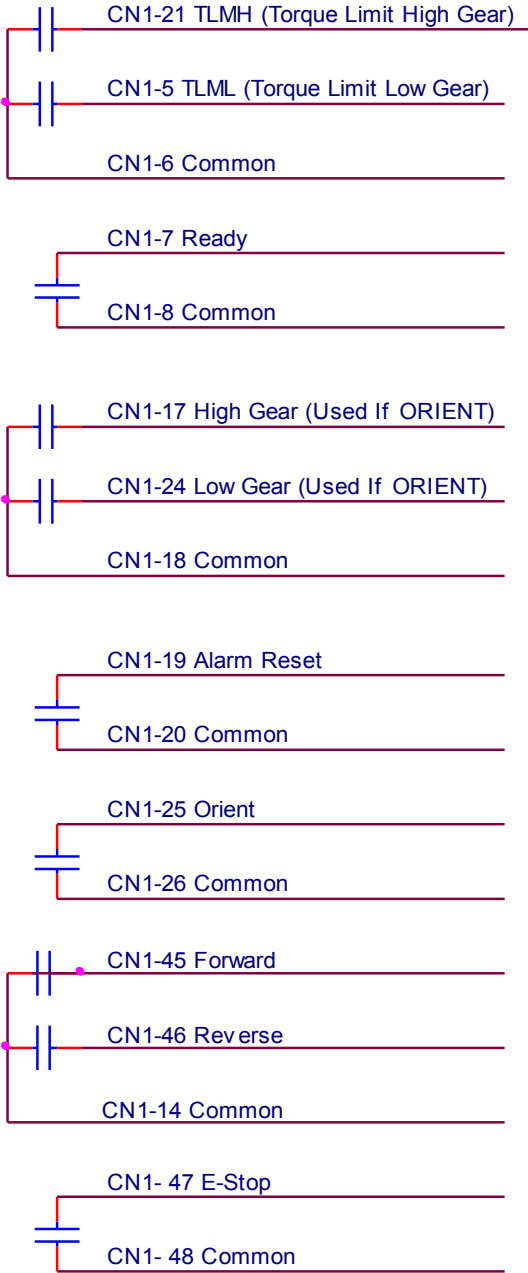

Spindle Drive Outputs

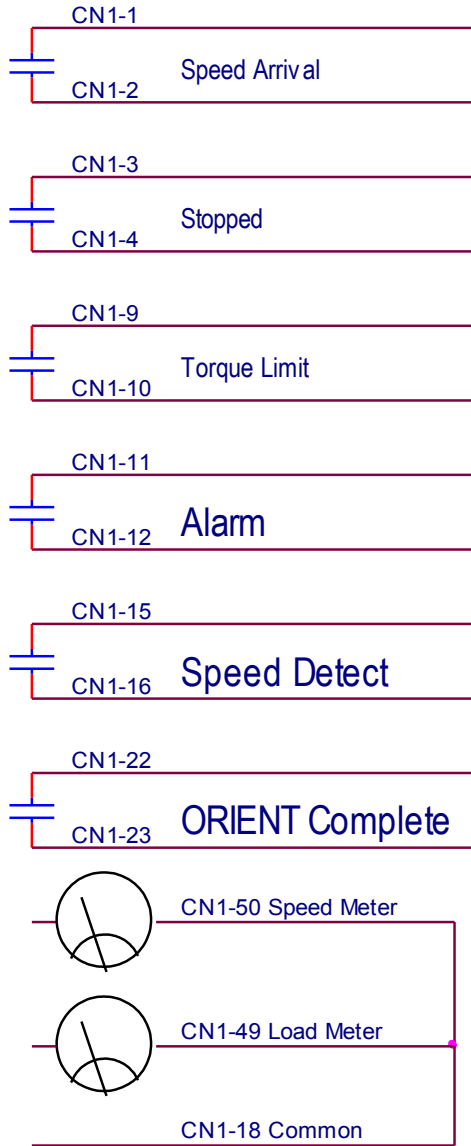

Spindle Speed



* The D/A chip on the board needs pulled out. It will be in a socket on the spindle control board labeled CBI or CCD. Only one socket will have a chip.

If the spindle drive has the ORIENT function, it will have a ORIENT card on top of the main card.

A20B-0008-0240 (0241)

A20B-0008-0030 (0031)

A20B-0009-0520

CN2 connector has feedback from motor, and MUST be left on.